


AIR SYSTEM OPERATION WITH DUMP, LIFT & MANUAL-OVERRIDE WITH GAUGE

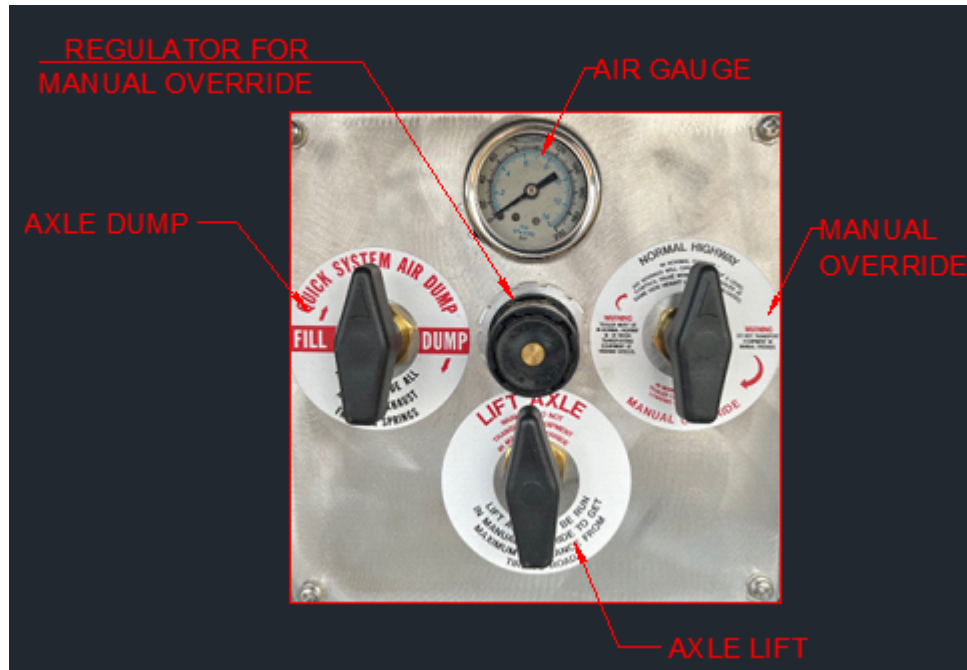

1. To begin, all axles are down in Normal Highway setting.
2. To lift rear axle, turn Axle Lift valve to lift position.
3. To achieve adequate ground clearance, turn Manual Override valve to manual override.
4. Operator may need to adjust Regulator to get desired tire clearance.
 - a. If not enough tire clearance, turn regulator clockwise.
 - b. Turn regulator counter-clockwise if manual override lifts trailer too high.
5. To drop axle and return to normal highway operation, rotate Lift Axle valve back to normal and Manual Override valve back to normal highway.
6. To dump axles, turn Axle Dump knob to Dump. This will dump all axles.
7. To return to Normal Highway setting, turn knob to Fill.